


Interior Layout

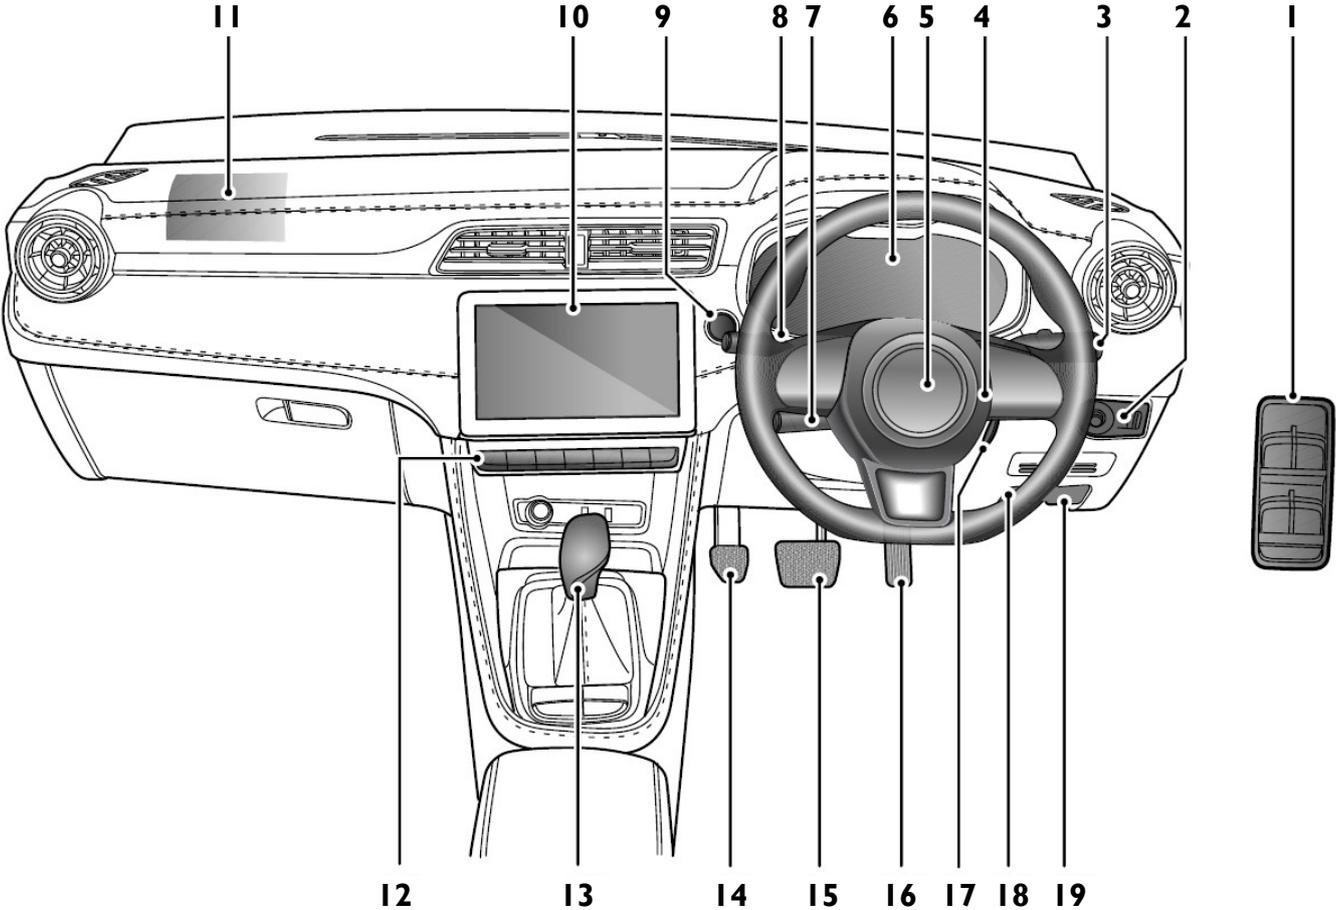


Interior Layout


1. Power Window Switch
2. Exterior Rearview Mirror and Headlamp Levelling Switch
3. Wiper Stalk Switch
4. Horn Button
5. Driver Airbag
6. Instrument Pack
7. Cruise Control/ASL Stalk Switch
8. Indicators/Main Beam Stalk Switch
9. START/STOP Switch (Keyless Start)*
10. Infotainment System
11. Front Passenger Airbag
12. Infotainment/Air Conditioning Control Switch
13. Gear Shift Lever
14. Clutch Pedal*
15. Brake Pedal
16. Accelerator Pedal
17. STAT/STOP Switch (Key Start)*
18. Bonnet Release Handle
19. Fuel Filler Flap Release Handle

* Trim level or model dependant

Instrument Pack

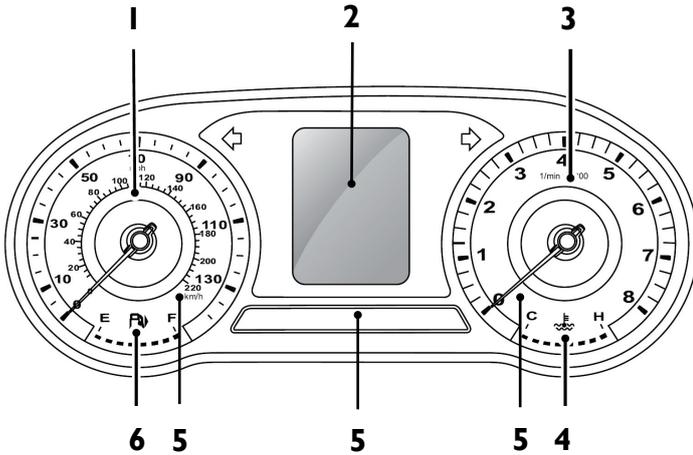


1. Speedometer - Indicates road speed in miles and kilometres per hour
2. Information Centre Display - Warnings, warning lamps, trip computer and driver information is communicated via this display.
3. Tachometer - Indicates engine speed in revolutions per minute x 1000
4. Coolant Temperature Gauge
5. Warning Lamp Displays
6. Fuel Gauge - The quantity of fuel in the tank is indicated by the number of segments illuminated.

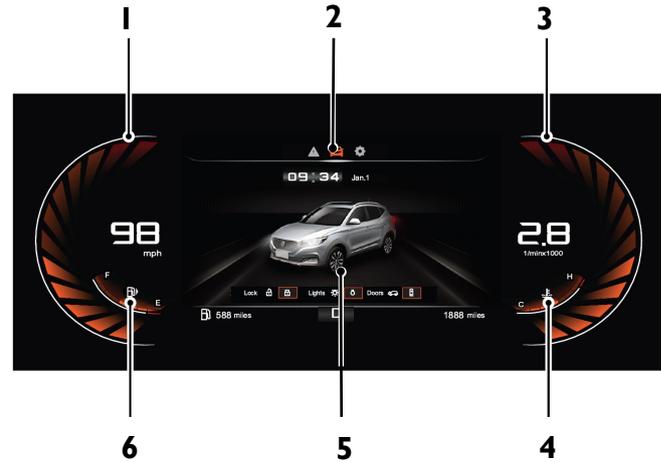

1. Speedometer - Indicates road speed in miles and kilometres per hour
2. General Information Display Options (Warnings, Trip Computer, Settings)
3. Tachometer - Indicates engine speed in revolutions per minute x 1000
4. Coolant Temperature Gauge
5. Information Centre Display - Warnings, trip computer and driver information is communicated via this display.
6. Fuel Gauge - The quantity of fuel in the tank is indicated by the number of segments illuminated.

Please consult Owners Handbook for detailed warning light description and function

Underbonnet Locations 1.5L

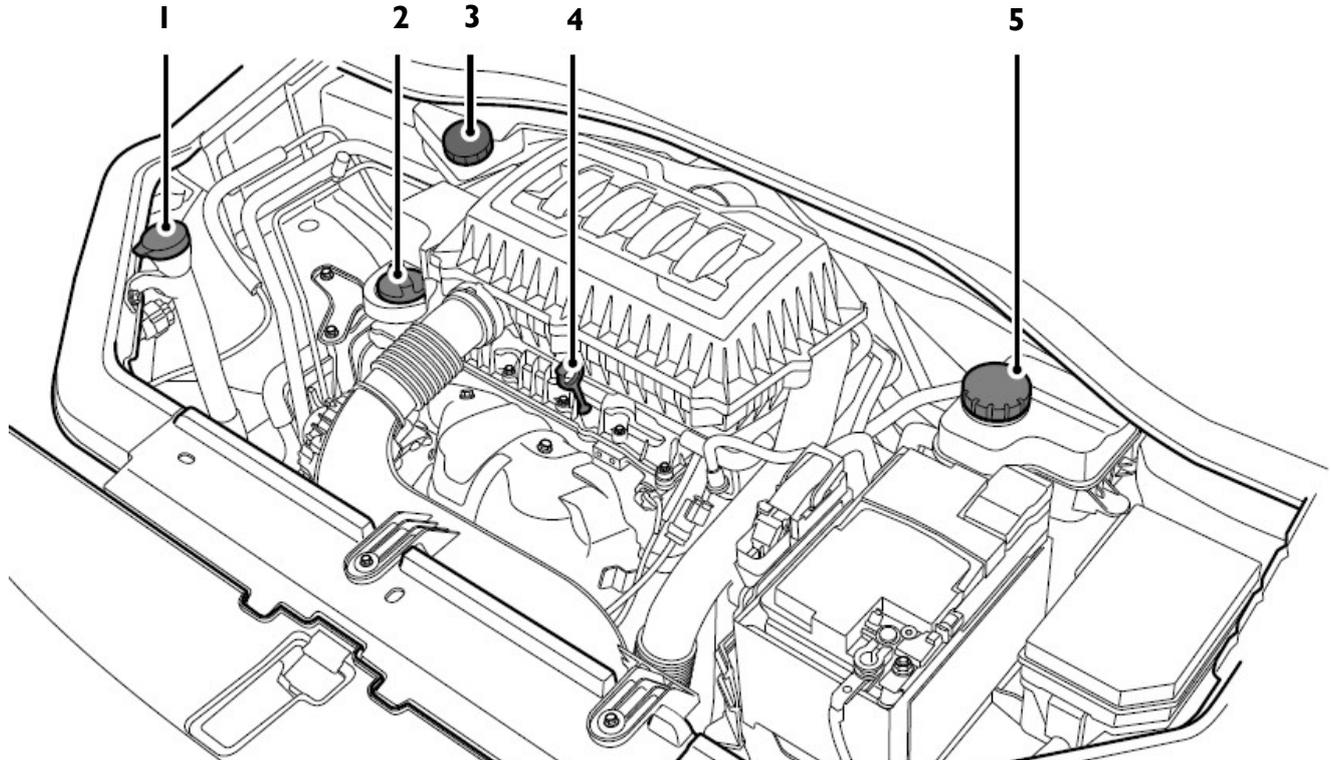

1. Washer fluid reservoir (blue cap)
2. Oil filler cap (black cap)
3. Brake fluid reservoir (yellow cap)

4. Oil dipstick (yellow)
5. Coolant reservoir (black cap)


Recommended Fluids, Capacities and Pressures

		1.5L	1.0T Man	1.0T Auto
Engine Oil (Litres)	C5 0W-20	4.1	4.0	4.0
Engine Coolant (Litres)	Glycol (OAT)	5.4	5.8	5.8
Transmission Fluid - Manual (Litres)	MTF 94	1.8	-	-
Transmission Fluid - Manual (Litres)	Castrol BOT503	-	1.7	-
Transmission Fluid Auto (Litres)	AW-I	-	-	6.2
Brake Fluid (Litres)	DOT 4	0.75	0.75	0.75
Washer Fluid (Litres)	ZY-VIII	4	4	4
Air Conditioning Refrigerant, g	R1234yf	520±20	520±20	520±20
Air Conditioning Oil, ml	SP-A2	140 +/- 10	80 +/-10	80 +/-10
Fuel Tank (Litres)		45	45	45

Tyre Pressures (cold)

Front	17" 2.3 bar (34 psi)
Rear	17" 2.3 bar (34 psi)

Remote Key, Ignition Switch and Starting

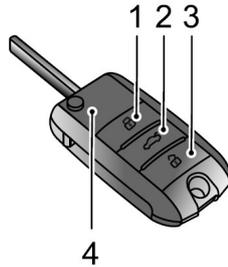

1. Lock button
2. Tailgate release button
3. Unlock button
4. Key

Position LOCK

- Insert or remove key.
- Rotate steering wheel to activate lock.

Position ACC


- The key can not be removed. Engine will not run.
- Limited electrical equipment operation (wipers etc).

Position ON

- Limited electrical equipment will function with engine not running (no A/C or heated rear window)
- All electrical equipment will function with engine running.
- Engine will run after starting


Position START

- Start the engine.
- Release the key immediately after the engine is started, the ignition switch will return to ON/RUN automatically

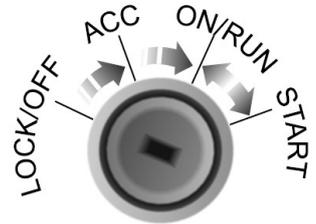

Please consult Owners Handbook for detailed starting description and function

Underbonnet Locations 1.0T

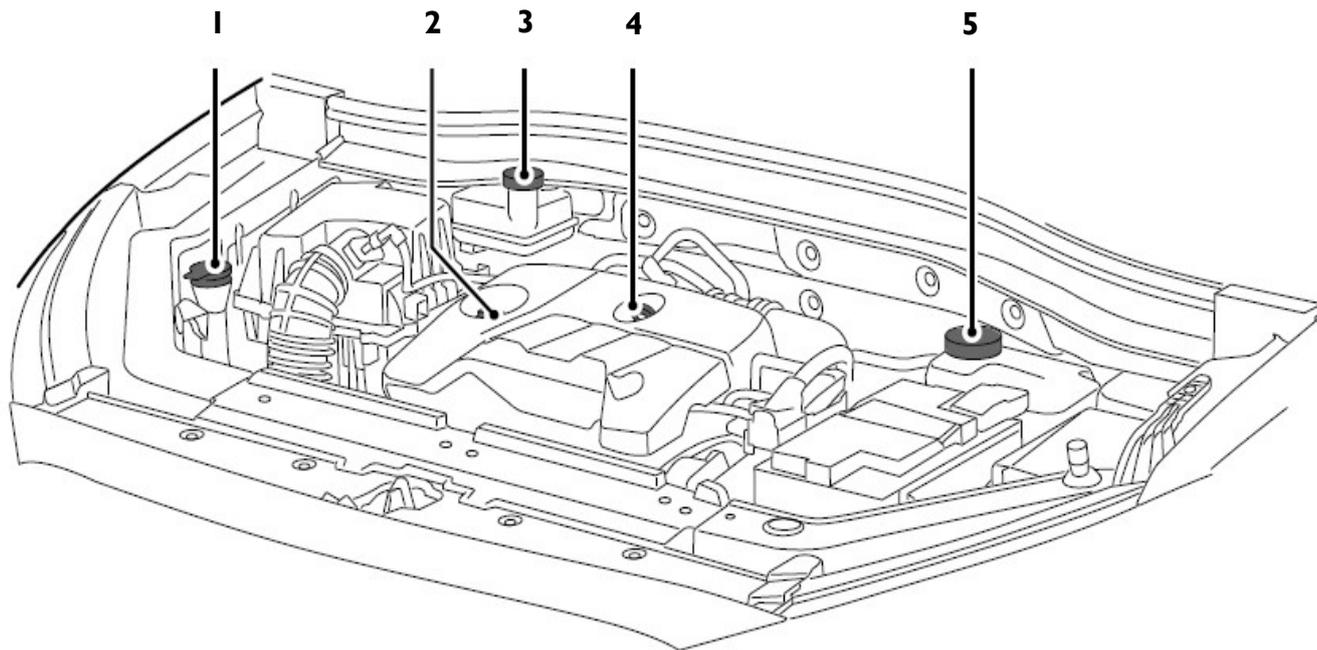

1. Washer fluid reservoir (blue cap)
2. Oil filler cap (black cap)
3. Brake fluid reservoir (yellow cap)

4. Oil dipstick (yellow)
5. Coolant reservoir (black cap)


Smart Key, Keyless Entry and START/STOP Button

Keyless Locking

Upon exiting the vehicle, press the button on the front door handle once (no need to press the lock button on the key) to lock all doors before walking away from the car, the vehicle will enter the immobilised/alarm armed state.



Note: With the vehicle in locked state, pressing the button on the front door handle, and performing no other operations within 30 seconds, automatically relocks the car.

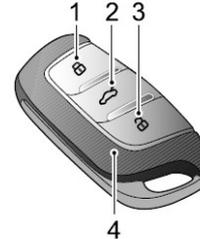

1. Lock button
2. Tailgate release button
3. Unlock button
4. Smart Key

Indicator Off (OFF)

- If the button has not been operated and there are no indicators illuminated, the power system is OFF. The power seats and electric door mirrors remain operational.

Yellow Light (ACC)

- Pressing the START STOP button without the footbrake being applied whilst the vehicle ignition is OFF will place the system in the ACC state, this will illuminate the yellow indicator in the switch button. The ACC position allows operation of certain ancillaries such as power windows.

Green Light (ON/RUN/START)

- Whilst in the ACC state, pressing the START STOP button without the footbrake being applied will switch the ignition ON, the green indicator will illuminate. This will allow the remaining electrical systems to operate.
- Pressing the START STOP button with P/N selected and the Footbrake/Clutch pedal applied will start the engine.

